


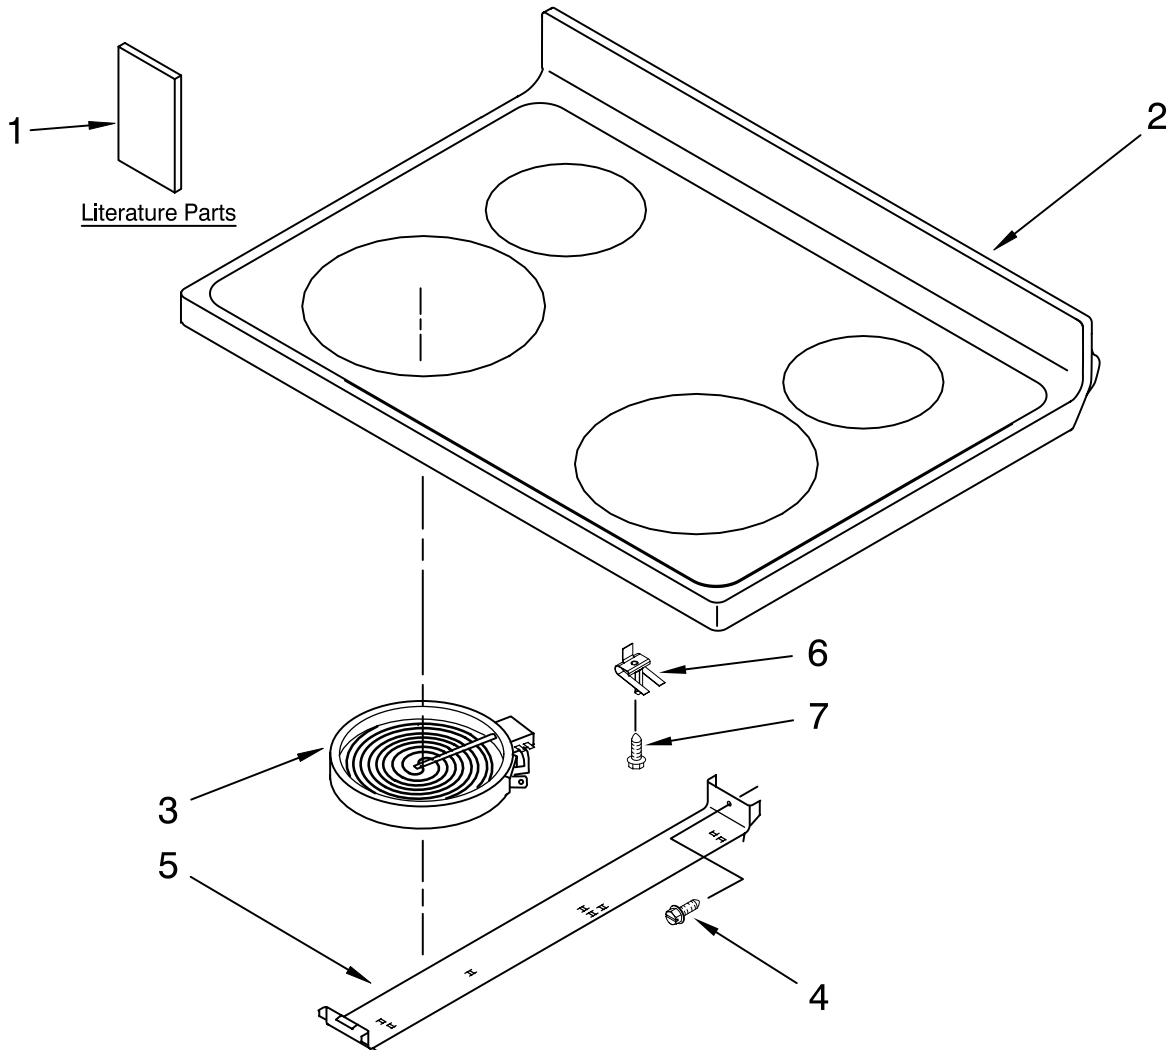

COOKTOP PARTS

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4
(Designer White)(Designer Biscuit)(Black)

30" ELECTRIC FREESTANDING
SELF CLEAN RANGE



Illus. No.	Part No.	DESCRIPTION
1	W10141166	Literature Instructions Installations Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	W10162204	Owners Manual
	W10133890	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10134933	White
	W10134934	Biscuit
	W10134935	Black

Illus. No.	Part No.	DESCRIPTION
3	8273992	2500 W – LF/RF
	8273994	1200 W – LR/RR
4	3196169	Screw
5	8272791	Bracket, Element
6	W10035930	Spring, Locator
7	3196170	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4
(Designer White)(Designer Biscuit)(Black)

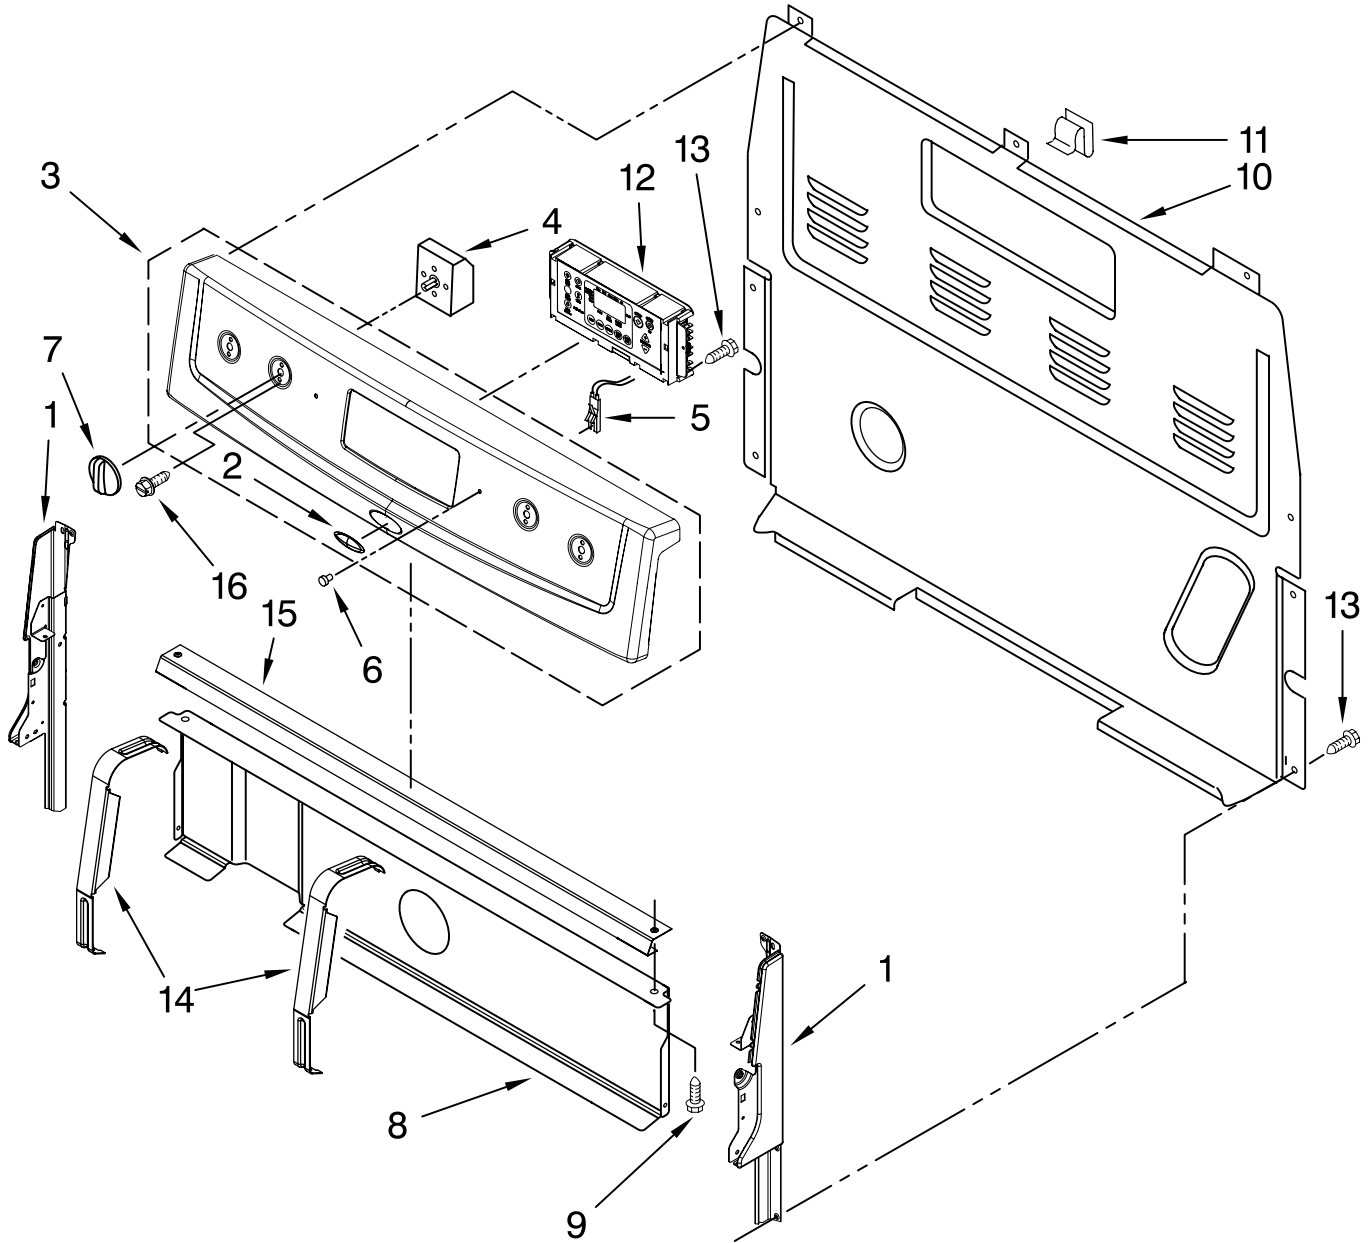

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9757609	Nameplate
3		Panel, Control
	9762018	White
	9762028	Biscuit
	9762029	Black


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148954	LF/RF (Orange)
	3148951	LR/RR (Silver)
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	9761962	White
	9761963	Biscuit
	9761964	Black
8	W10134247	Shield, Heat

Illus. No.	Part No.	DESCRIPTION
9		Screw
	3196166	White
	8281194	Biscuit
	3196168	Black
10	8272473	Cover, Upper
11	8273564	Clip
12		Control, Range
	W10108220	White
	W10108240	Biscuit
	W10108230	Black
13	3196178	Screw
14	9762078	Brkt-Mntg., EOC
15	9762095	Brkt-Mntg, Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4
(Designer White)(Designer Biscuit)(Black)

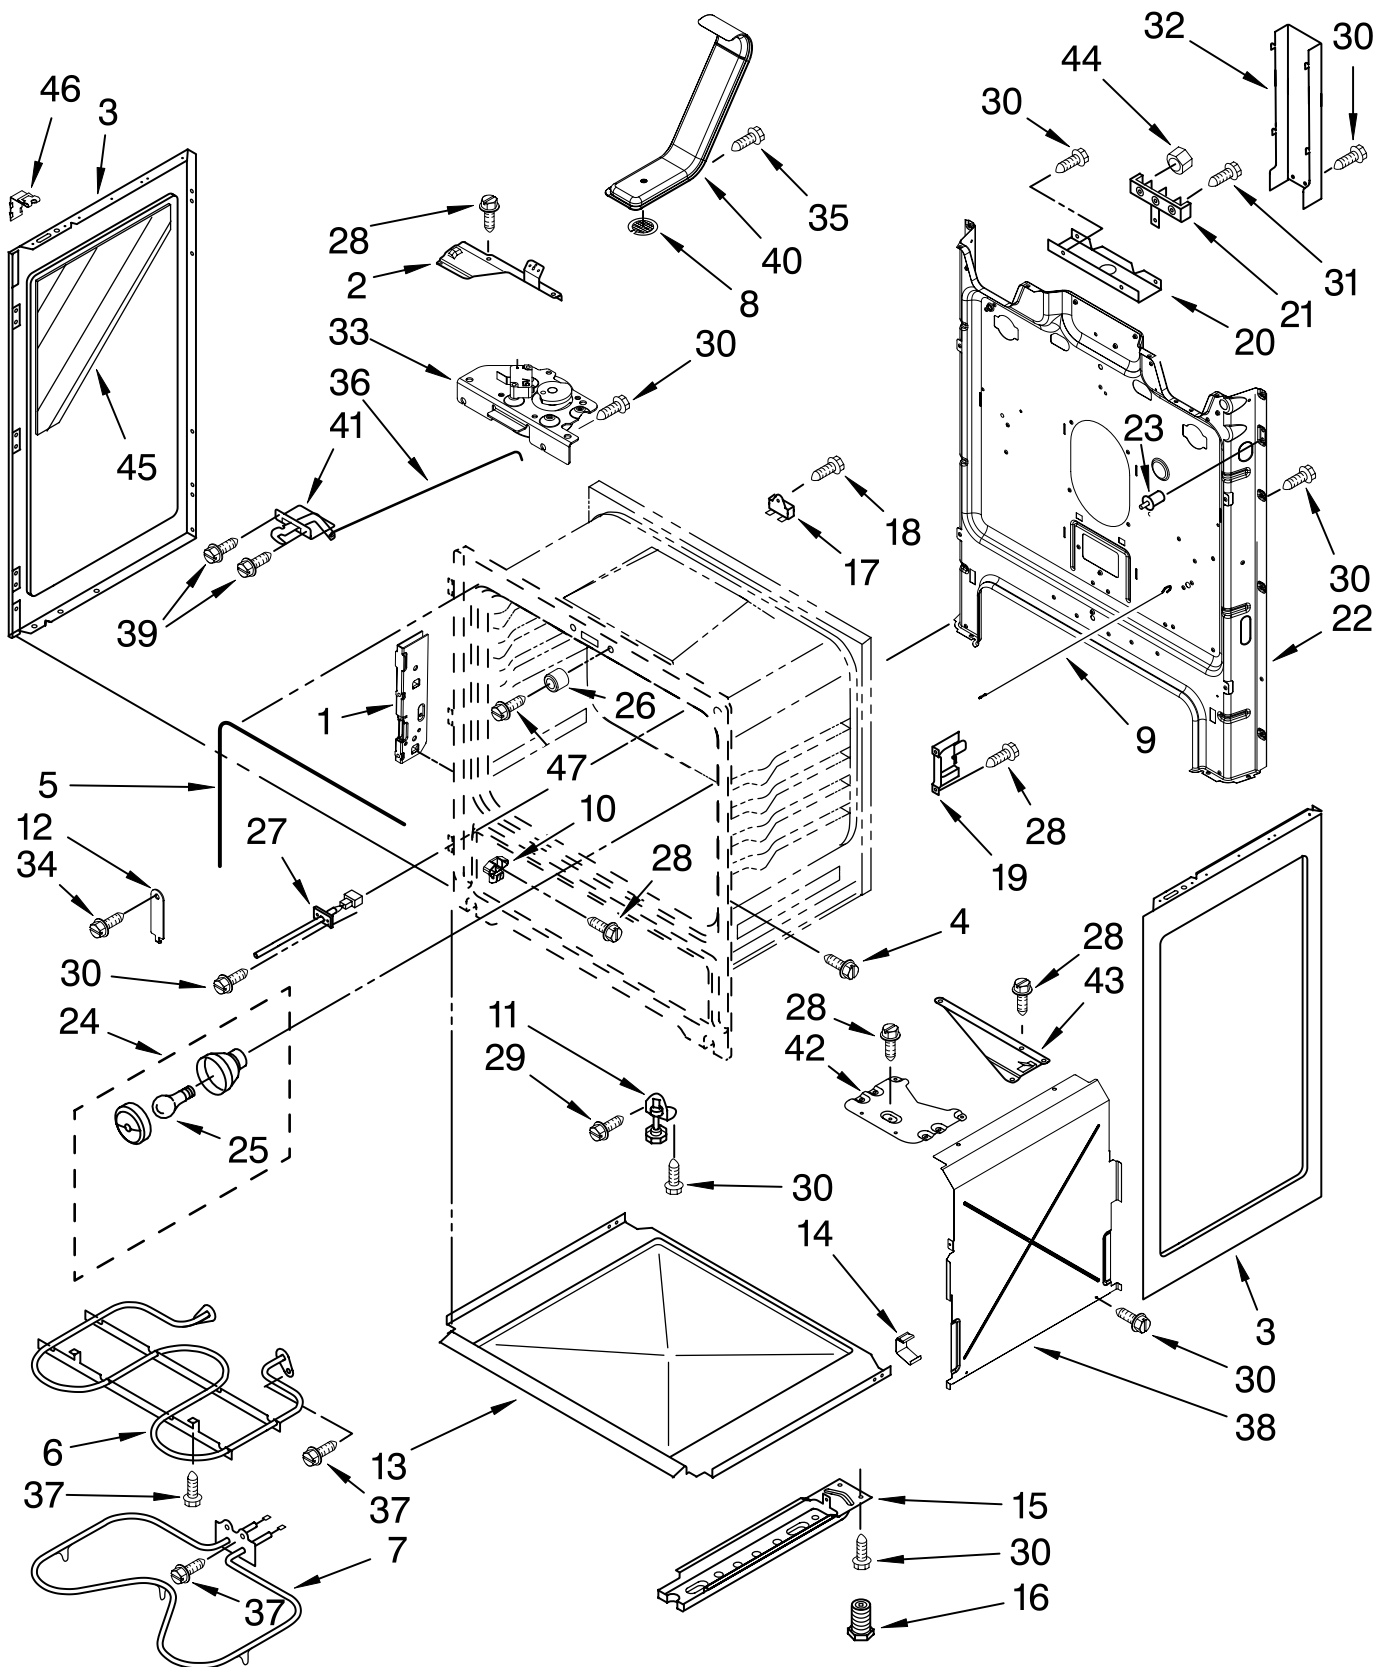

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4
(Designer White)(Designer Biscuit)(Black)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt – Mounting	17	3196548	Thermal, Fuse	36	W10078380	Rod, Latch
2	8273905	Support, Corner LR	18	3196172	Screw	37	3196174	Screw
3		Panel, Side (2)	19	3186116	Support, Oven (2)	38	9758238	Retainer, Insul(2)
	8053830	White	20	3186034	Bracket, Service	39	3196560	Screw (2)
	8272519	Biscuit	21	9761958	Block, Terminal	40	9761299	Flue
	8053832	Black	22	8274034	Back, Main	41	9761013	Latch, Door
4	W10067840	Screw	23	9757262	Switch, Door	42	3195736	Support, Front (2)
5	8522416	Seal, Oven Door	24	3196701	Light Socket Assy	43	3195987	Support, Corner RR
6	9757340	Element, Broil	25	311255	Bulb, Oven Light	44	112432	Nut
7	9758541	Element, Bake	26	9758701	Spacer – Door	45	9761490	Insulation, Foil
8	9761301	Screen–Catalyst	27	8273902	Sensor, Oven	46	9761512	Clip, Mounting
9	9757239	Rod – Dr Switch	28	3196169	Screw	47	3196168	Screw
10	W10114344	Glide, Drawer Frnt	29	3196179	Screw	INSULATION		
11	3196037	Foot, Front (2)	30	3196178	Screw			
12	9761517	Clip,Door Mntg(2)	31	3400016	Screw			
13	8054068	Tray, Insulation	32	9758283	Cover, Box			
14	3196576	Clip, Panel (6)	33	W10107820	Latch Asy, Rear	8272616		Insulation, Wrap
15	9760314	Rail, Base (2)	34	W10031780	Screw	8272612		Insulation, Back
16	W10058460	Foot, Rear (2)	35	3196566	Screw	8272613		Insulation, Vent

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4

(Designer White)(Designer Biscuit)(Black)

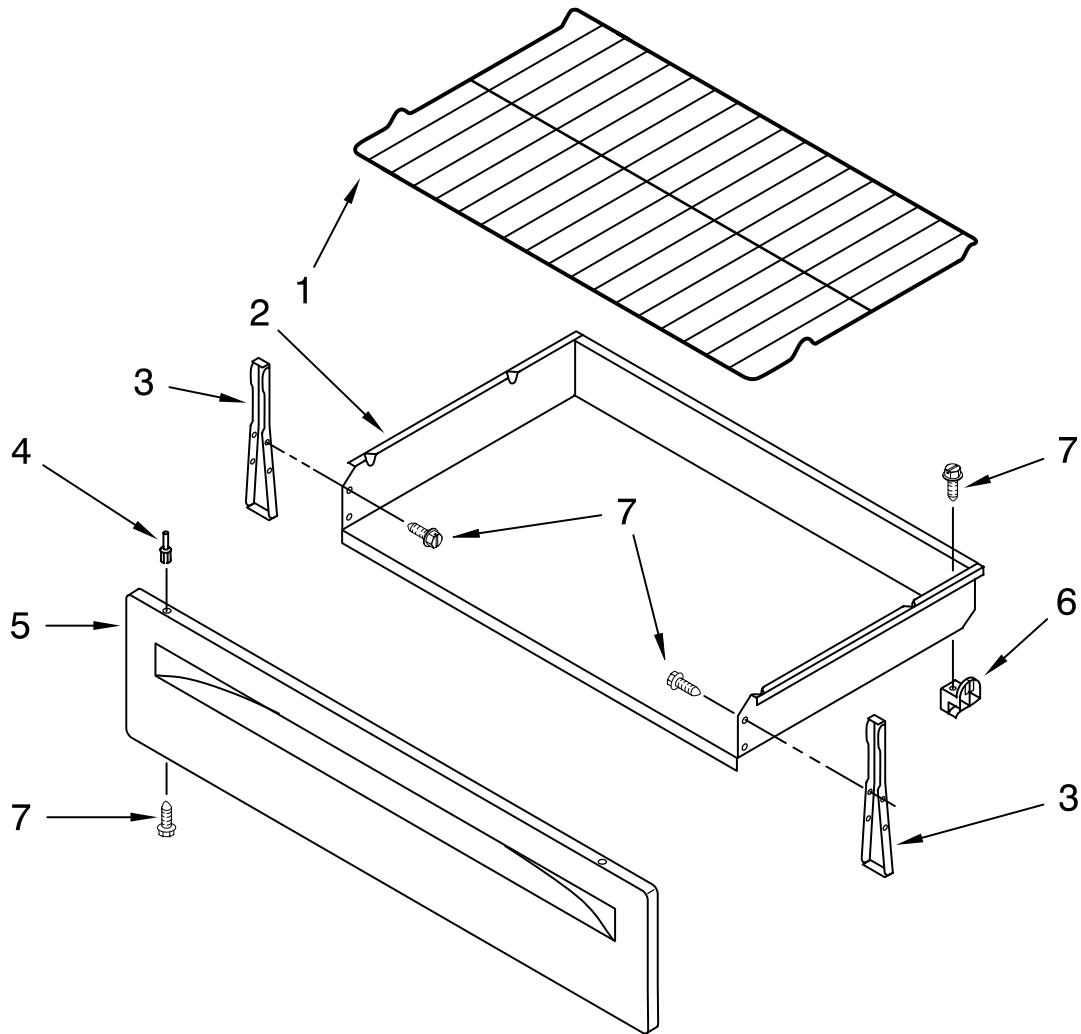


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196813	Black
	3196814	White
	3196815	Almond
5		Panel, Drawer Frnt
	8053341	Black
	8053339	White
	8272501	Biscuit
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4
(Designer White)(Designer Biscuit)(Black)

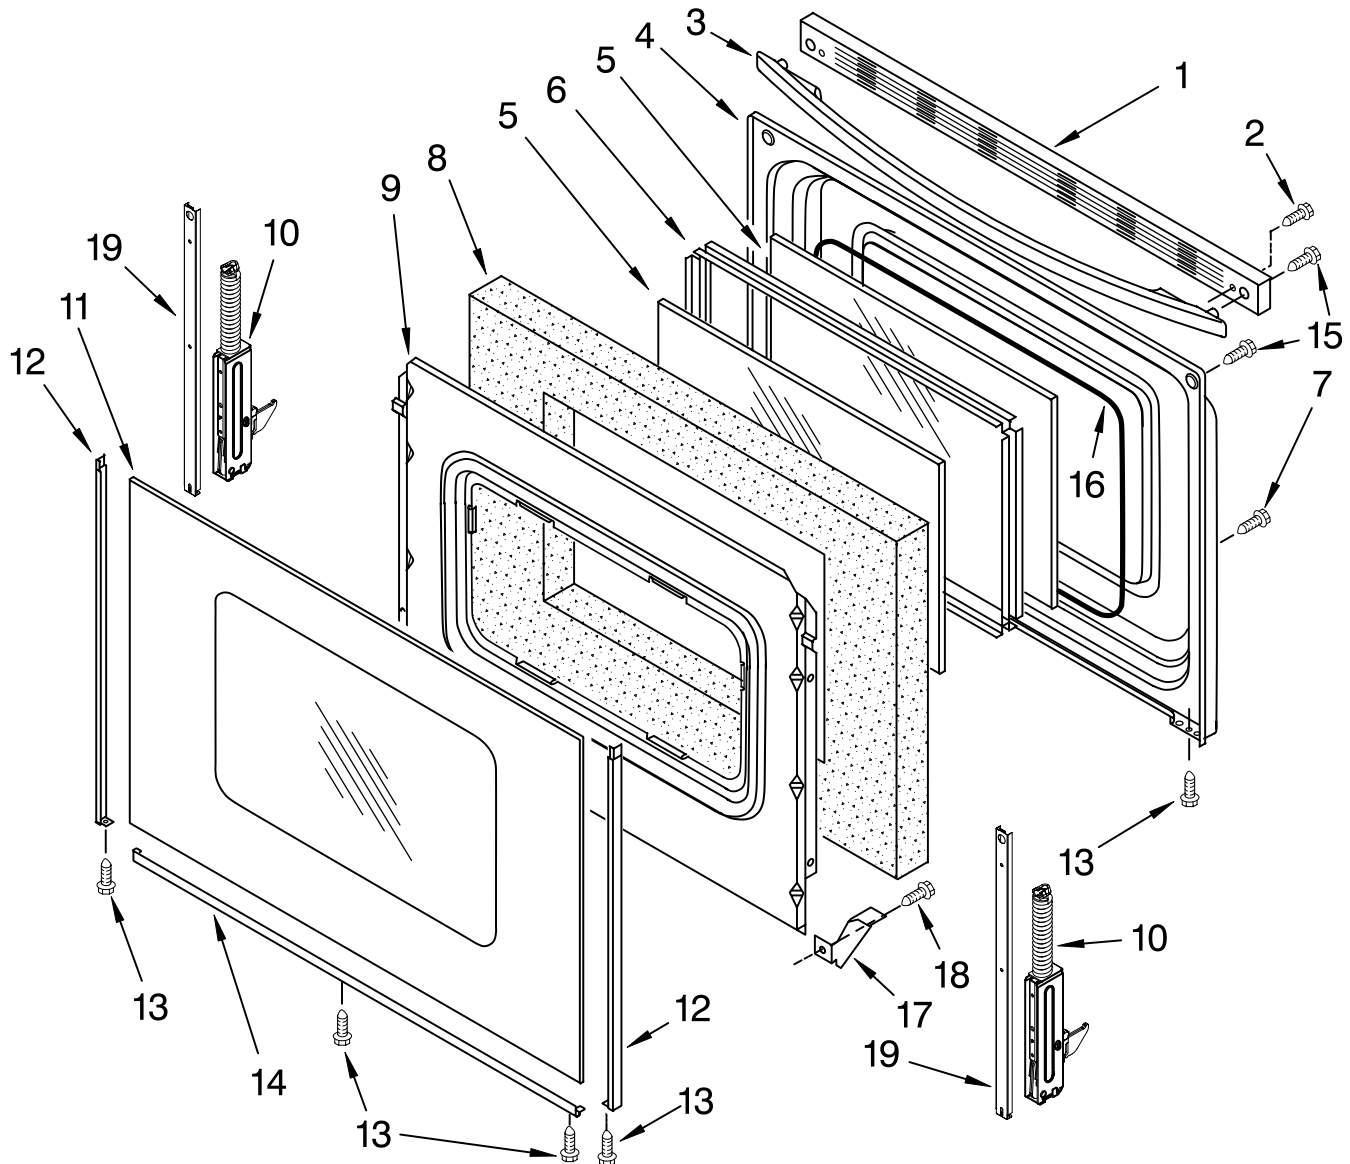

Illus. No.	Part No.	DESCRIPTION
1	9762391	Trim, Top
	9761975	Black
	9761976	White
	9761976	Biscuit
2	3196164	Screw
3		Handle, Door
	9761983	Black
	9761982	White
	9761984	Biscuit
4	9761344	Liner, Door
5	9758162	Glass, Inner (2)
6	3186289	Frame, Glass
7	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761493	Hinge, Door
11		Glass, Outer Door
	W10075990	Black
	W10075980	White
	W10076000	Biscuit
12		Trim, Door Side
	8523171	Black L.H.
	8523165	Black R.H.
	8523172	White L.H.
	8523166	White R.H.
	8523167	Biscuit L.H.
	8523173	Biscuit R.H.

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14		Trim, Lower Door
	8523177	Black
	8523175	White
	8523178	Biscuit
15	W10031780	Screw
16	8522414	Seal, Window
17	3196794	Bracket, Window(2)
18	3196165	Screw
19	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF262LXSQ4, RF262LXST4, RF262LXSB4
(Designer White)(Designer Biscuit)(Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan, Broiler

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

W10111790	Harness, Wire (Cooktop Left)
W10111766	Harness, Wire (Cooktop Right)
W10084660	Harness, Wire (Sensor/Dr Switch)
8523279	Wire, Ground
3196154	Screw
W10111771	Harness, Wire (Main)
W10144763	Tie, Wire (Ceran Cktp)
313660	Clip, Wire Ground
3196173	Screw
3196174	Screw (Grnd Wire / Back)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST